



www.the3rdmillennium.com  
E-mail: info@the3rdmillennium.com

# P3 User Guide

## PREPARING THE FOOT



**1.** Trim the foot as normal. Make sure that you remove all loose or flakey solar material.




**2.** Clean vigorously with a wire brush to make sure that the sole is as clean as possible. Pay particular attention to the commissures of the frog.

**3.** Clean the sole and frog with alcohol to remove any trace of oils or moisturisers that may have been previously applied.



**4.** Polyurethane will not adhere properly to wet, moist or damp material. Dry the sole thoroughly with a heat gun or powerful hairdryer.

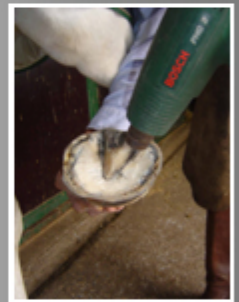

## PREPARING THE CARTRIDGE



**1.** Place the cartridge in the dispensing gun. Unscrew the cap and remove the seal. Don't throw it away as you may want to reseal it.

**3.** Tips have an integrally moulded thread. Simply screw them onto the cartridge.



**2.** Equalize the 2 components by gently squeezing the trigger until both components come out of the neck simultaneously.  
**(THIS IS VERY IMPORTANT)**

**4.** P3 is now ready to use. But first, dispense a small amount as waste to make sure the components are mixing 50-50

